


10'

866.652.2100

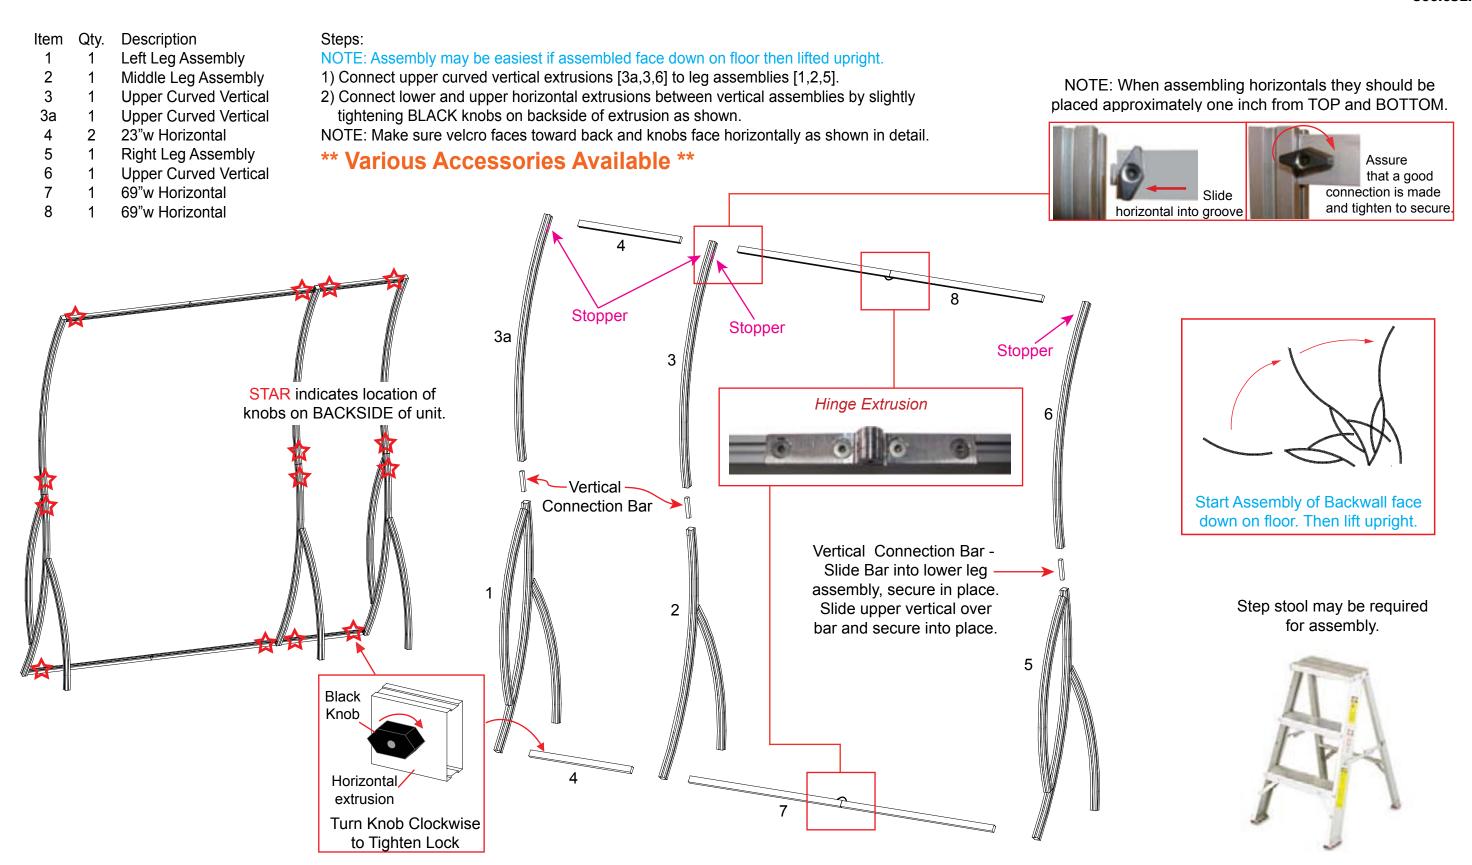

WHEN DISASSEMBLING TIGHTEN ALL KNOBS TO PREVENT LOSS DURING SHIPPING

www.classicexhibits.com

866.652.2100

 


Attach decorative wing and blades to A10's attached to Backwall as shown.



Decorative Blade Attachment
(if accidently removed)
Slide A10 Clamp into groove
of square extrusion.
A10


When desired location is found, tighten set screw to secure.



Tighten plastic knob to secure Wing in place.






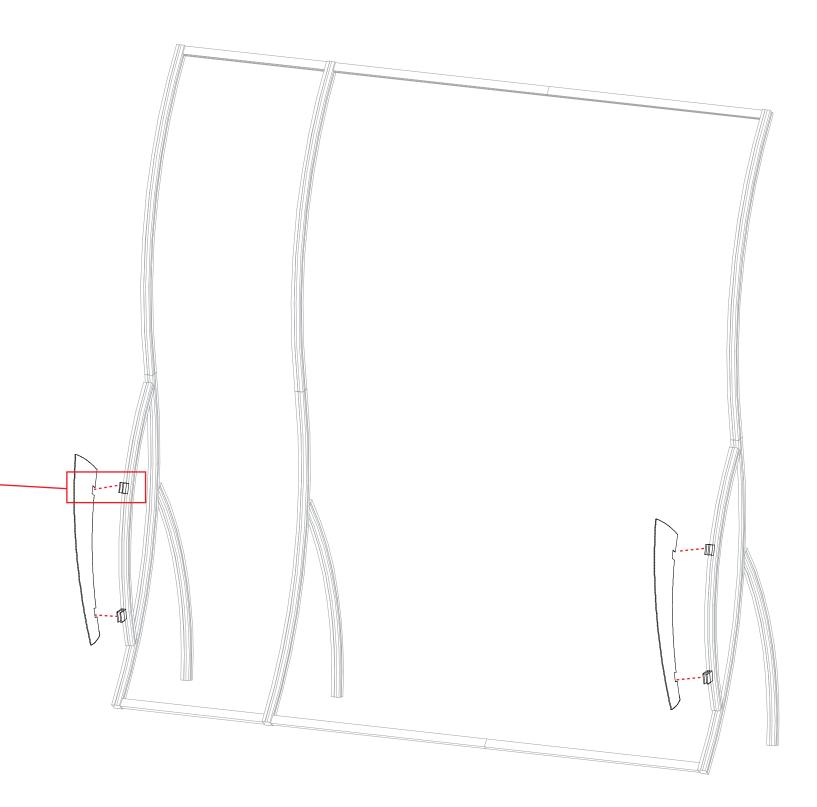



WHEN DISASSEMBLING TIGHTEN ALL KNOBS TO PREVENT LOSS DURING SHIPPING

www.classicexhibits.com

866.652.2100

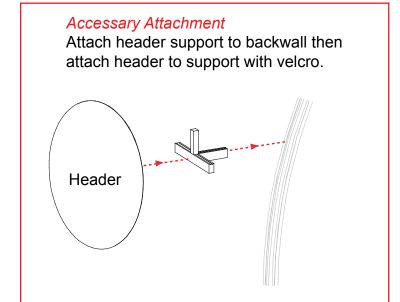

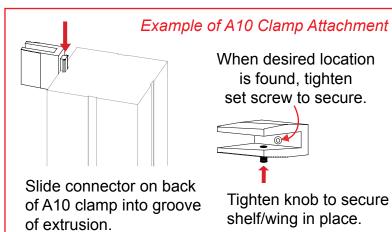

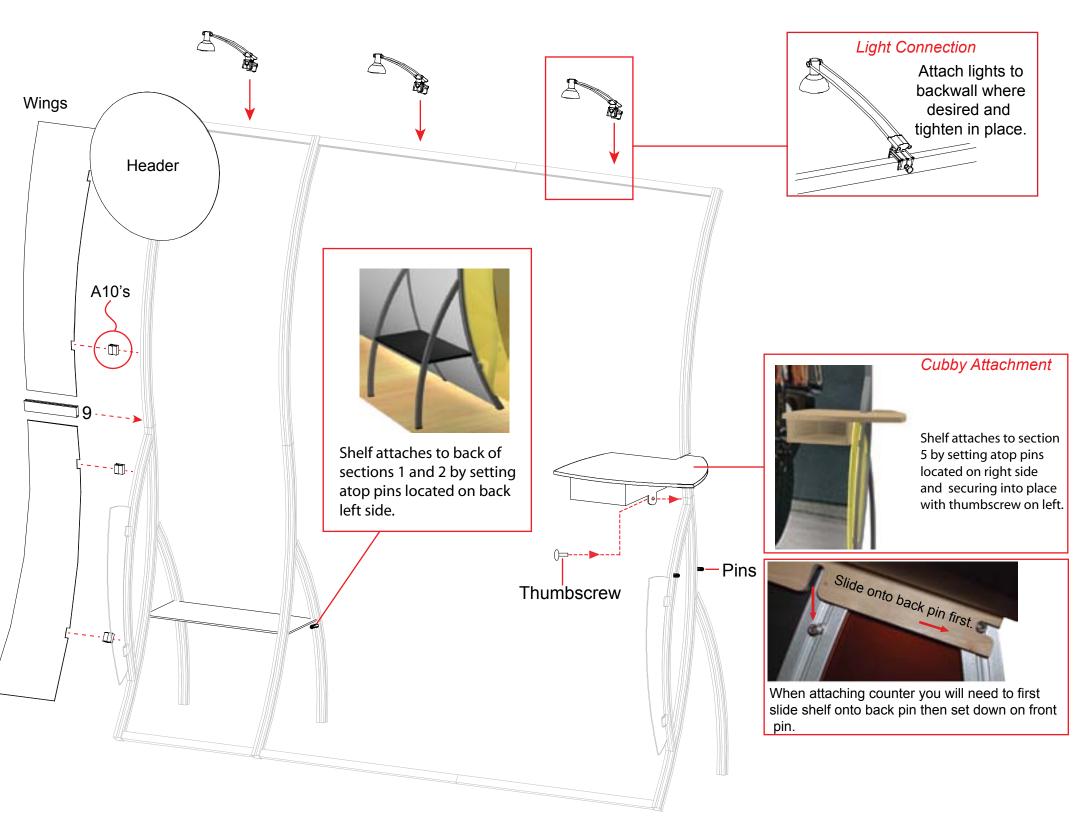






www.classicexhibits.com


Page 3 of 3


Top View of Each Level

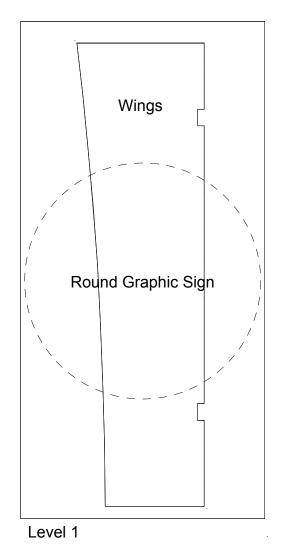

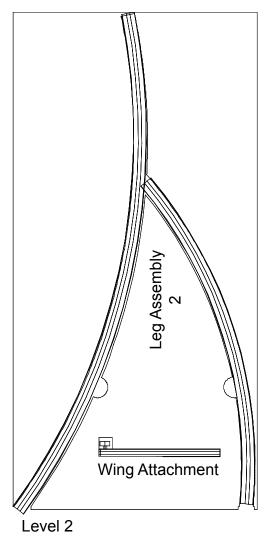

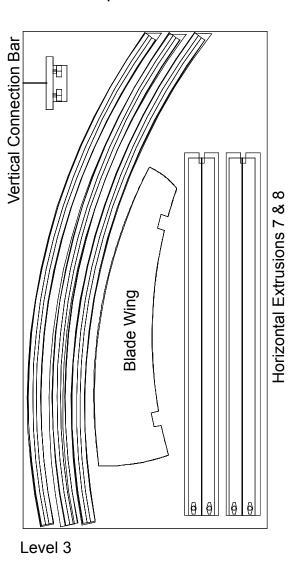

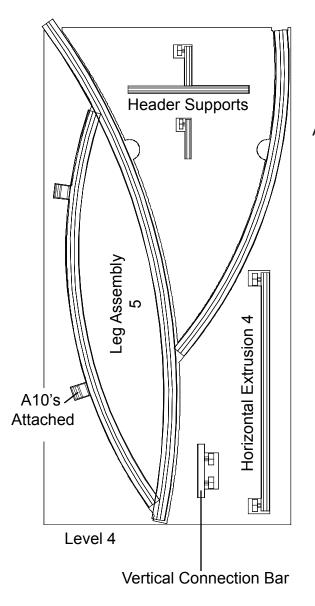


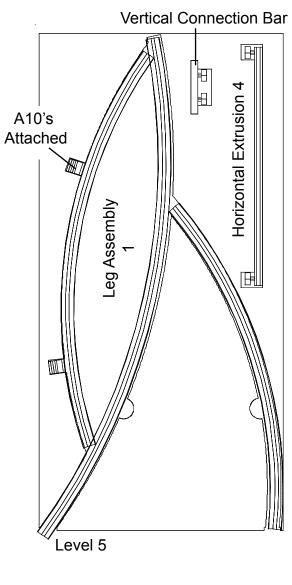

Additional Items:

- Setup Hardware
- Graphic
- (3) Lights

Top View

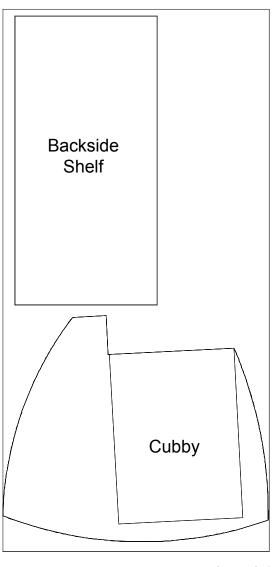

Level 1