


www.classicexhibits.com


patent D599,121

© 2014

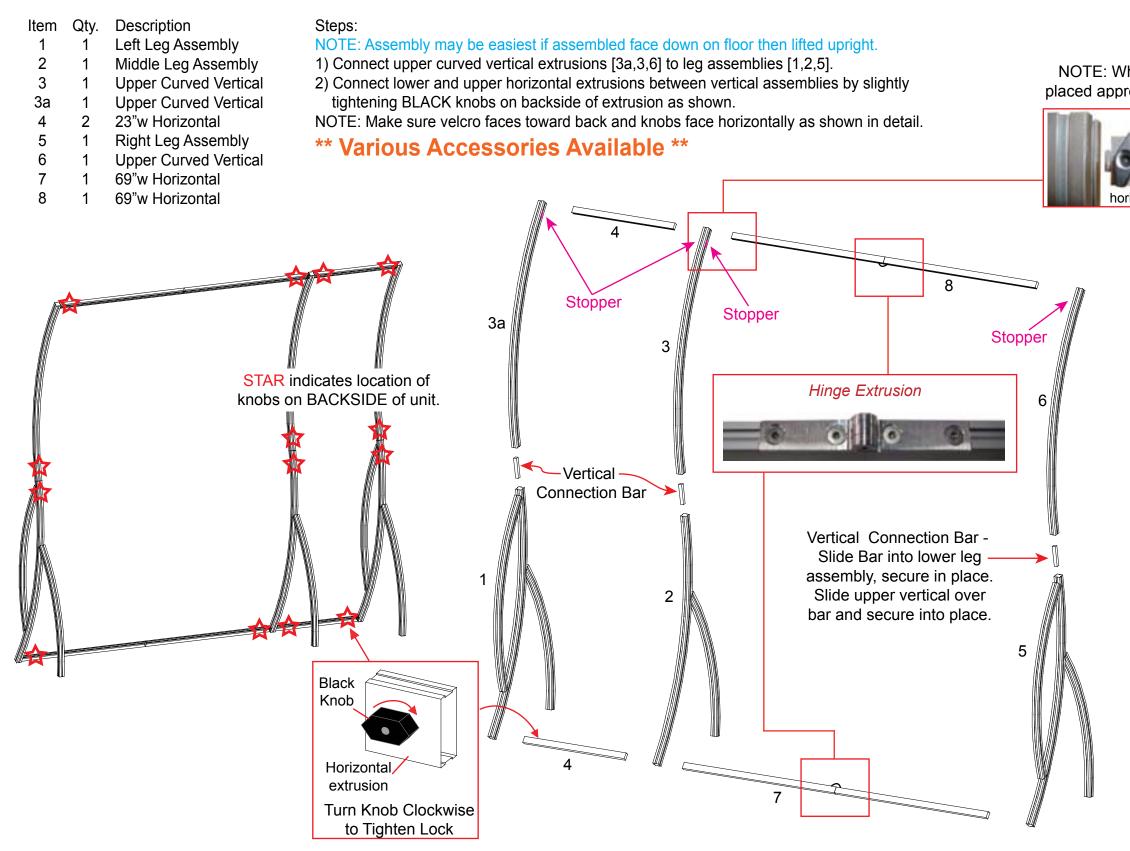


www.classicexhibits.com

NOTE: When assembling horizontals they should be placed approximately one inch from TOP and BOTTOM.





Assure that a good connection is made and tighten to secure.

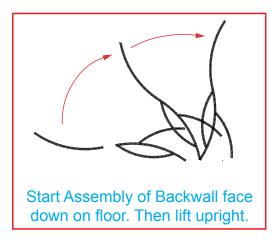


Step stool may be required for assembly.



© 2014

Page 1 of 5

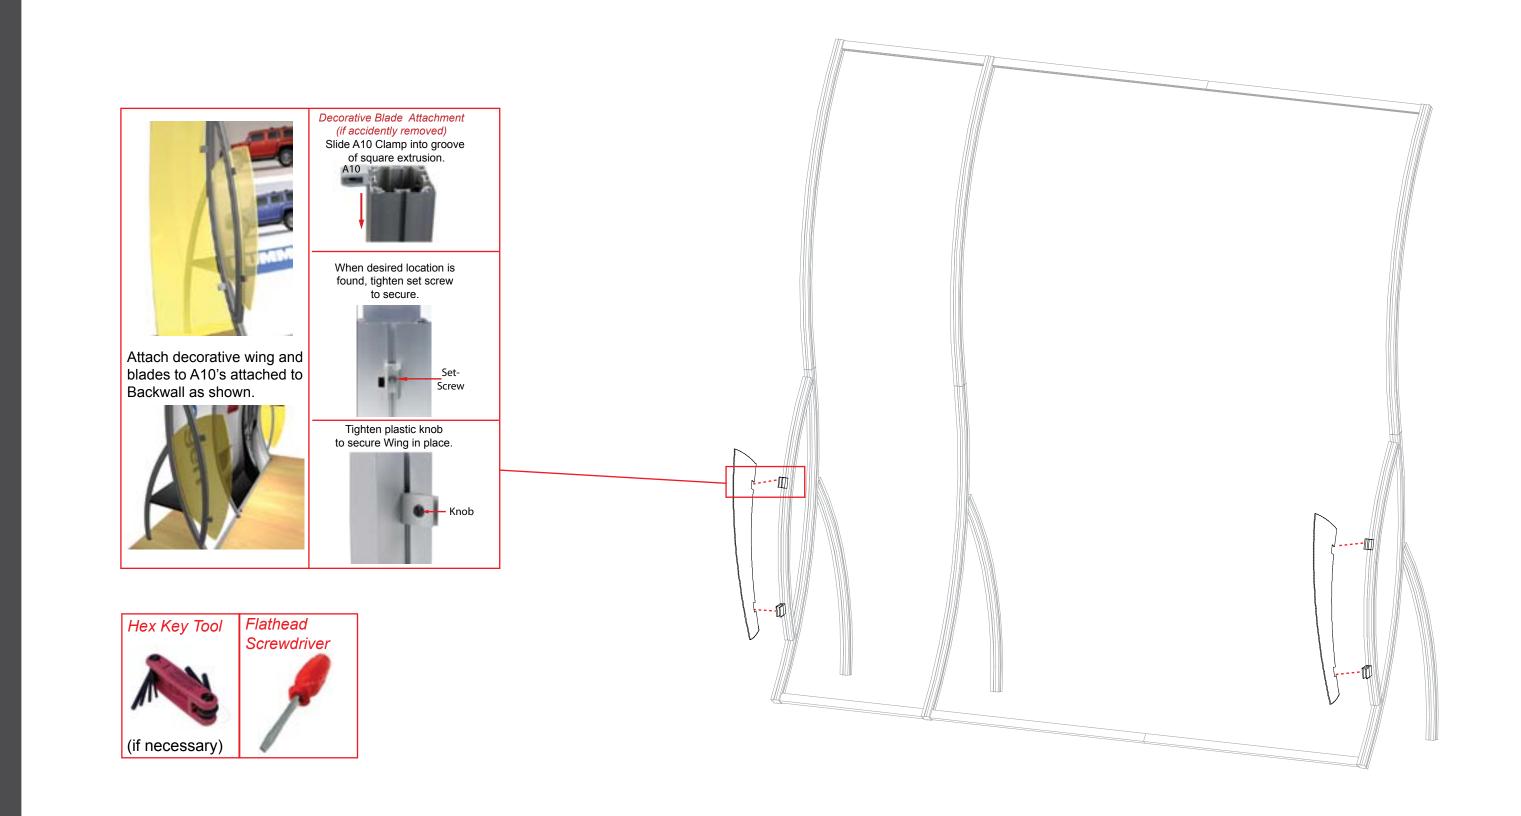


www.classicexhibits.com


Step 2



© 2014


Page 2 of 5

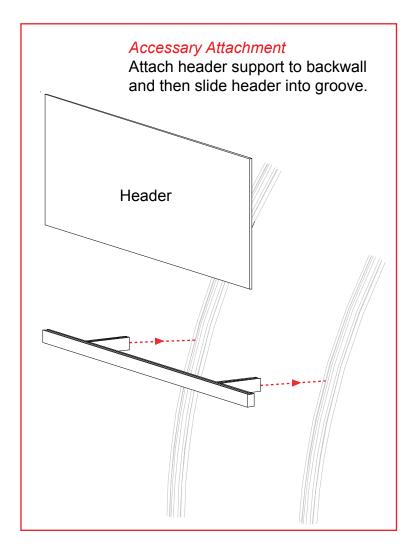

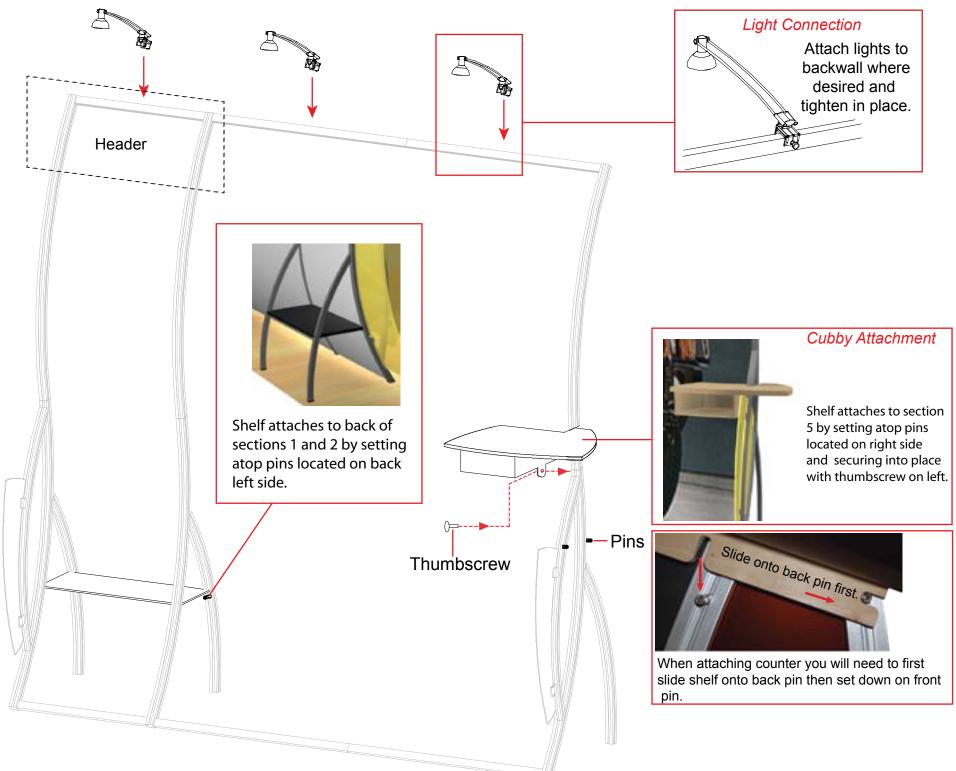

www.classicexhibits.com

866.652.2100

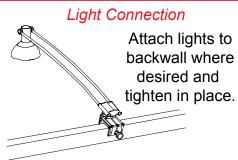

© 2014

patent D599,121


Page 3 of 5

| Part Number | Description |
|-------------|-------------------------------------|
| А | Left Leg Assembly |
| В | Right Leg Assembly |
| С | Horizontal Extrusion |
| D | Horiontal Extrusion w/ Door Stopper |


Steps:

- 1) Connect lower horizontal extrusion [C] between bottom of leg assemblies [A and B] as shown.
- 2) Insert Laminated infill into grooves of leg assemblies [A and B].
- 3) Attach extrusion door between leg assemblies [A and B] and on top of laminated infill.
- 4) Attach upper horizontal extrusion w/ door stopper [D] between leg assemblies [A and B], and set flush with top of legs [A and B].

NOTE: Make sure the lock is flush with extrusion before tightening. If lock will not fully engage, gently rock lock and extrusion back and forth while turning knob until lock fully opens.

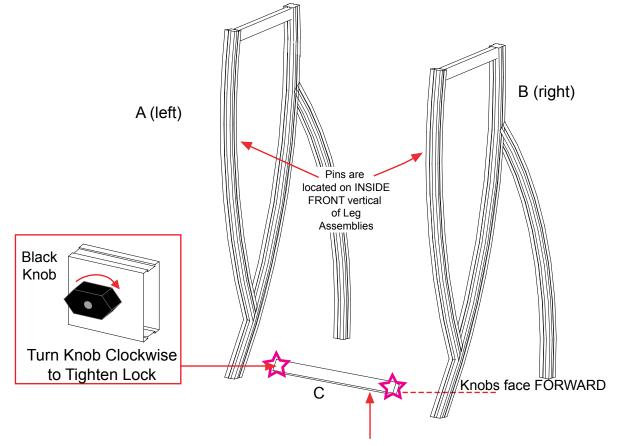

Align with bottom of leg assemblies [A and B].

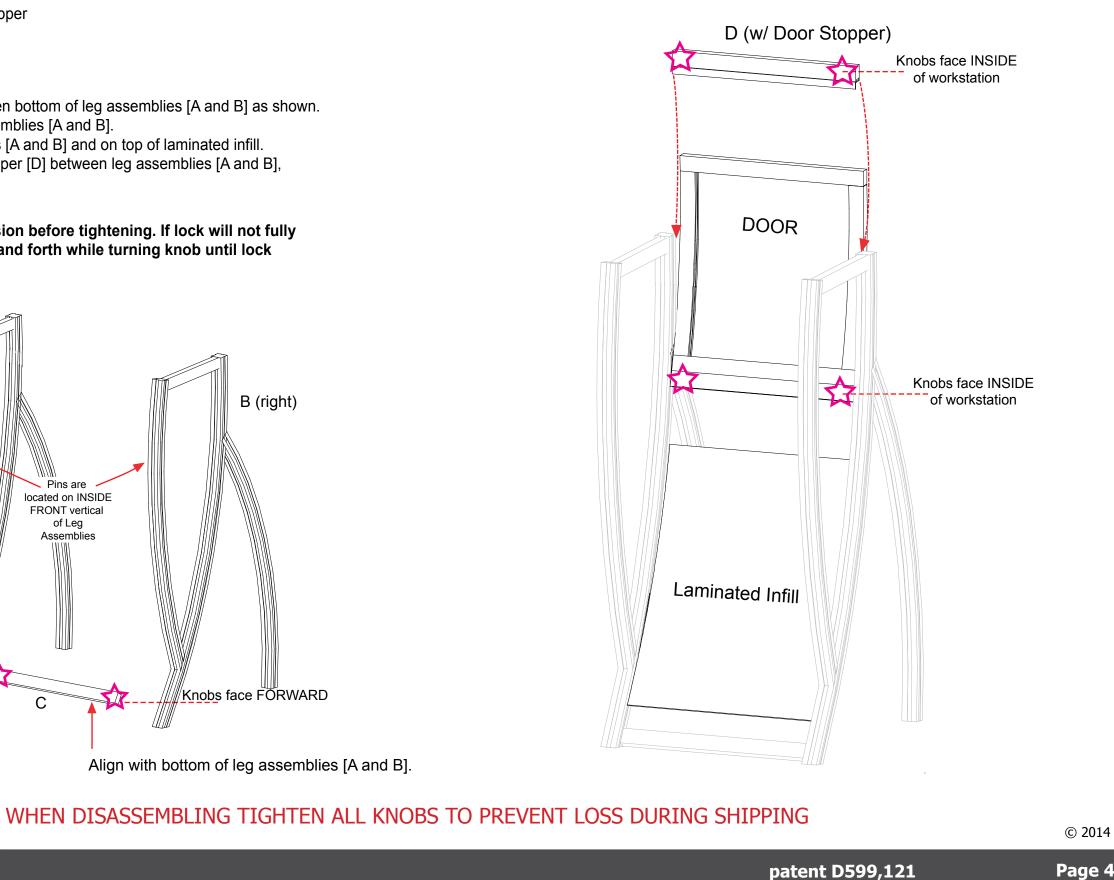

www.classicexhibits.com

Page 4 of 5

Е Horizontal Extrusion F

Horizontal Extrusion

Steps:


1) Attach horizontal extrusion [E] between vertical leg assemblies [A and B] as shown below.

2) Insert Laminated infill into grooves of vertical leg assemblies [A and B].

3) Attach upper horizontal extrusion [F] between vertical leg assemblies [A and B] atop infill.

4) Place internal shelf into assembled pedestal atop pins..

5) Set Counter atop assembled pedestal and secure with Velcro straps attached to underside of top.

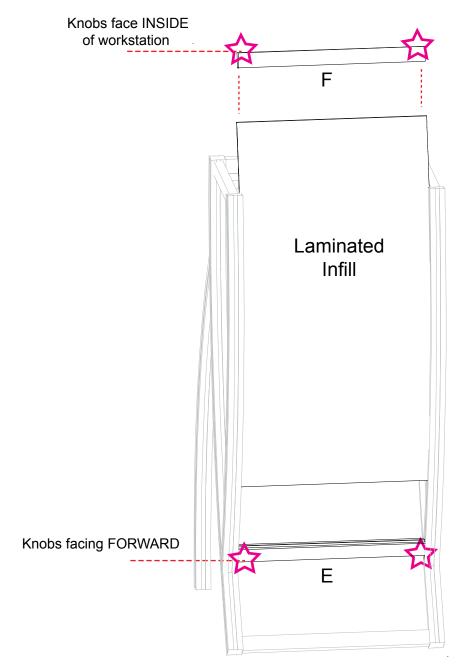


Place internal shelf into workstation then place counter atop assembled workstation.

WHEN DISASSEMBLING TIGHTEN ALL KNOBS TO PREVENT LOSS DURING SHIPPING

www.classicexhibits.com

Step 5


866.652.2100

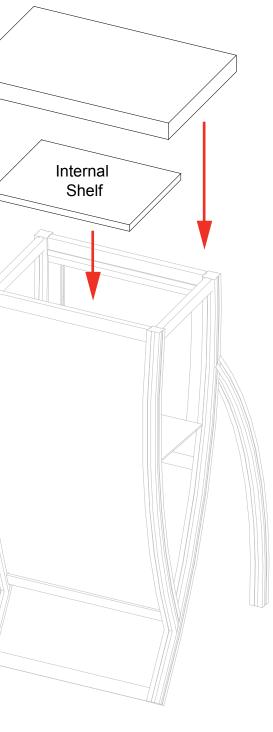

patent D599,121

© 2014

Page 5 of 5

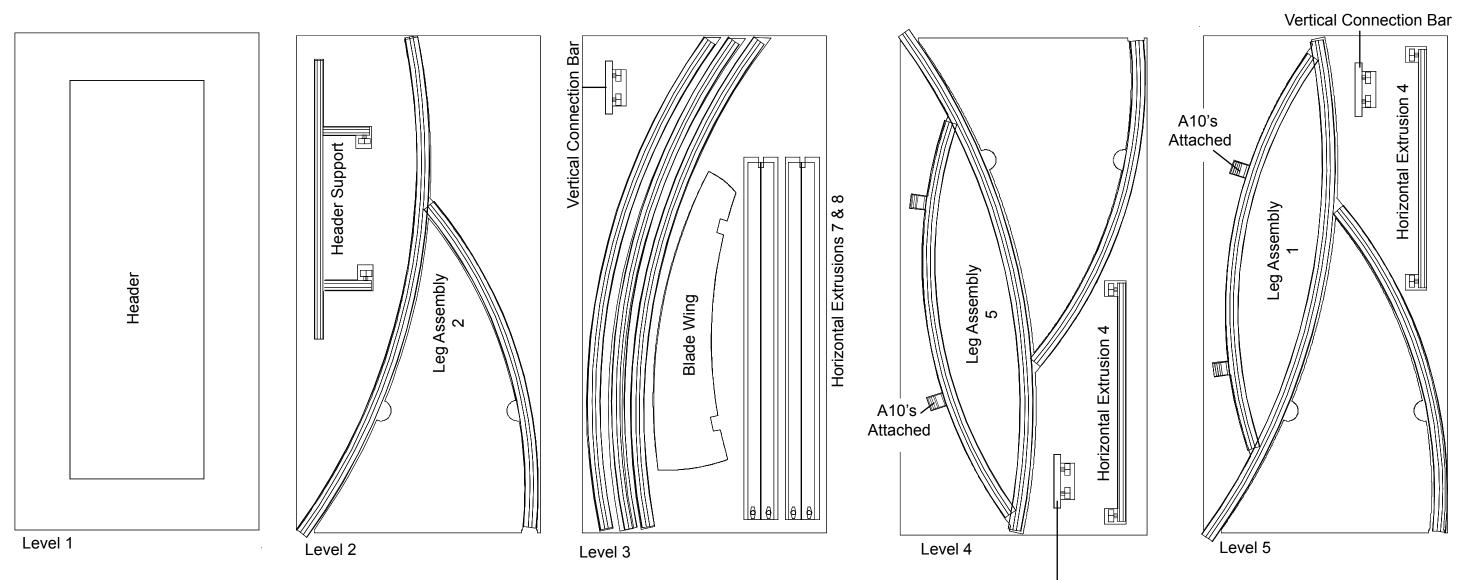


Vertical Connection Bar

www.classicexhibits.com

866.652.2100

Additional Items:

- Setup Hardware
- Graphic
- (3) Lights

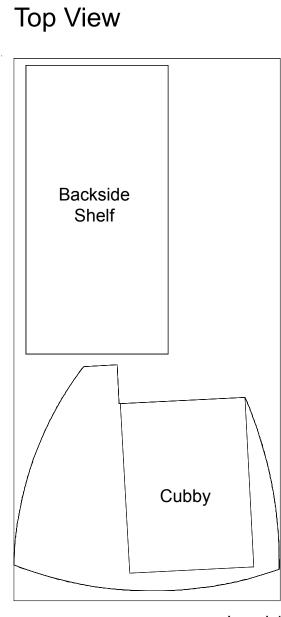


Level 1

WHEN DISASSEMBLING TIGHTEN ALL KNOBS TO PREVENT LOSS DURING SHIPPING

www.classicexhibits.com

866.652.2100

© 2014

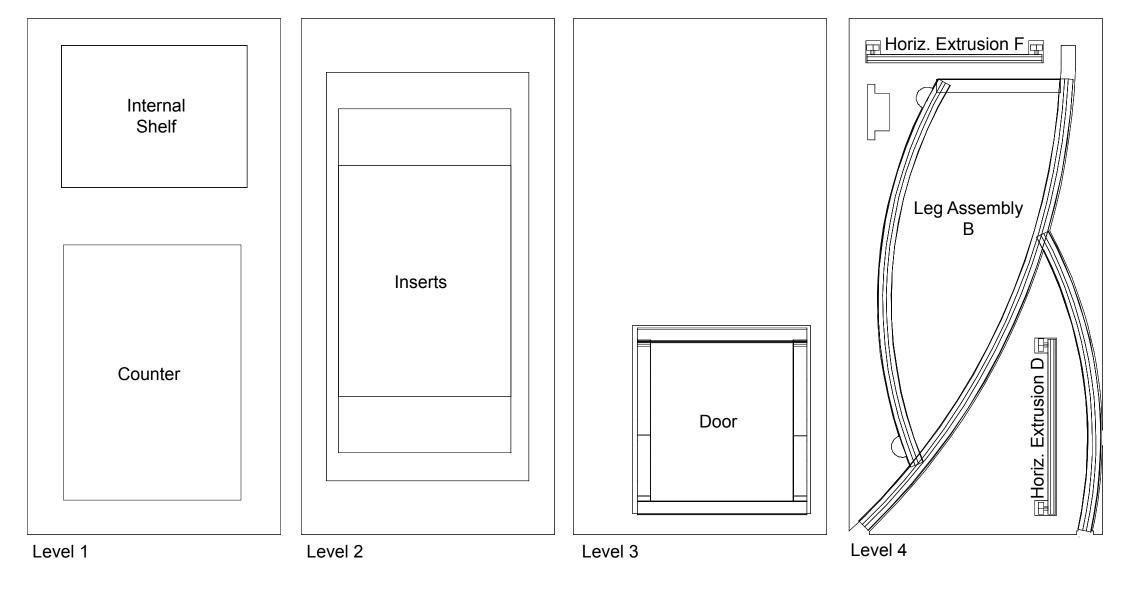

Top View of Each Level

WHEN DISASSEMBLING TIGHTEN ALL KNOBS TO PREVENT LOSS DURING SHIPPING

www.classicexhibits.com

866.652.2100

