

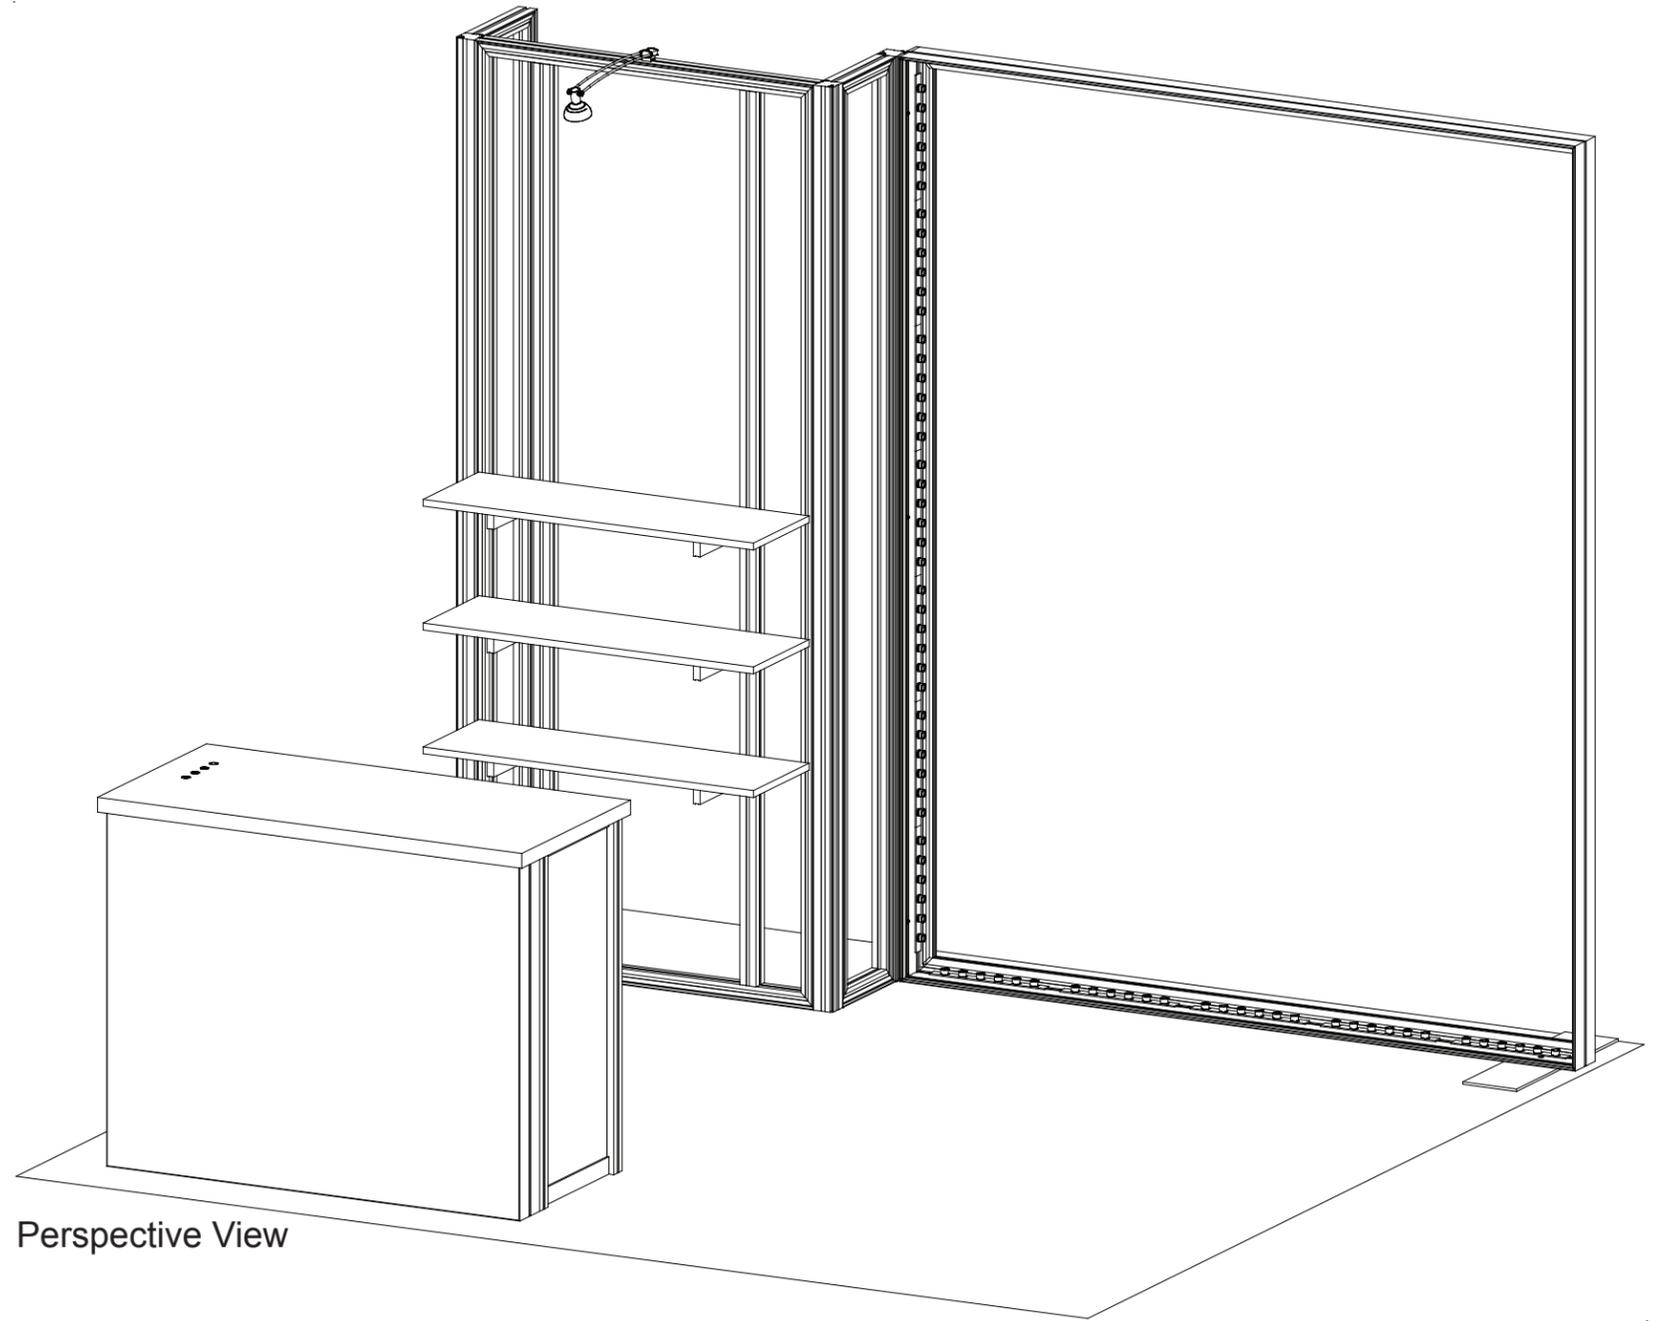


Top View

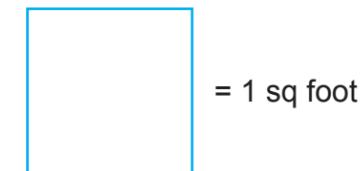

Perspective View

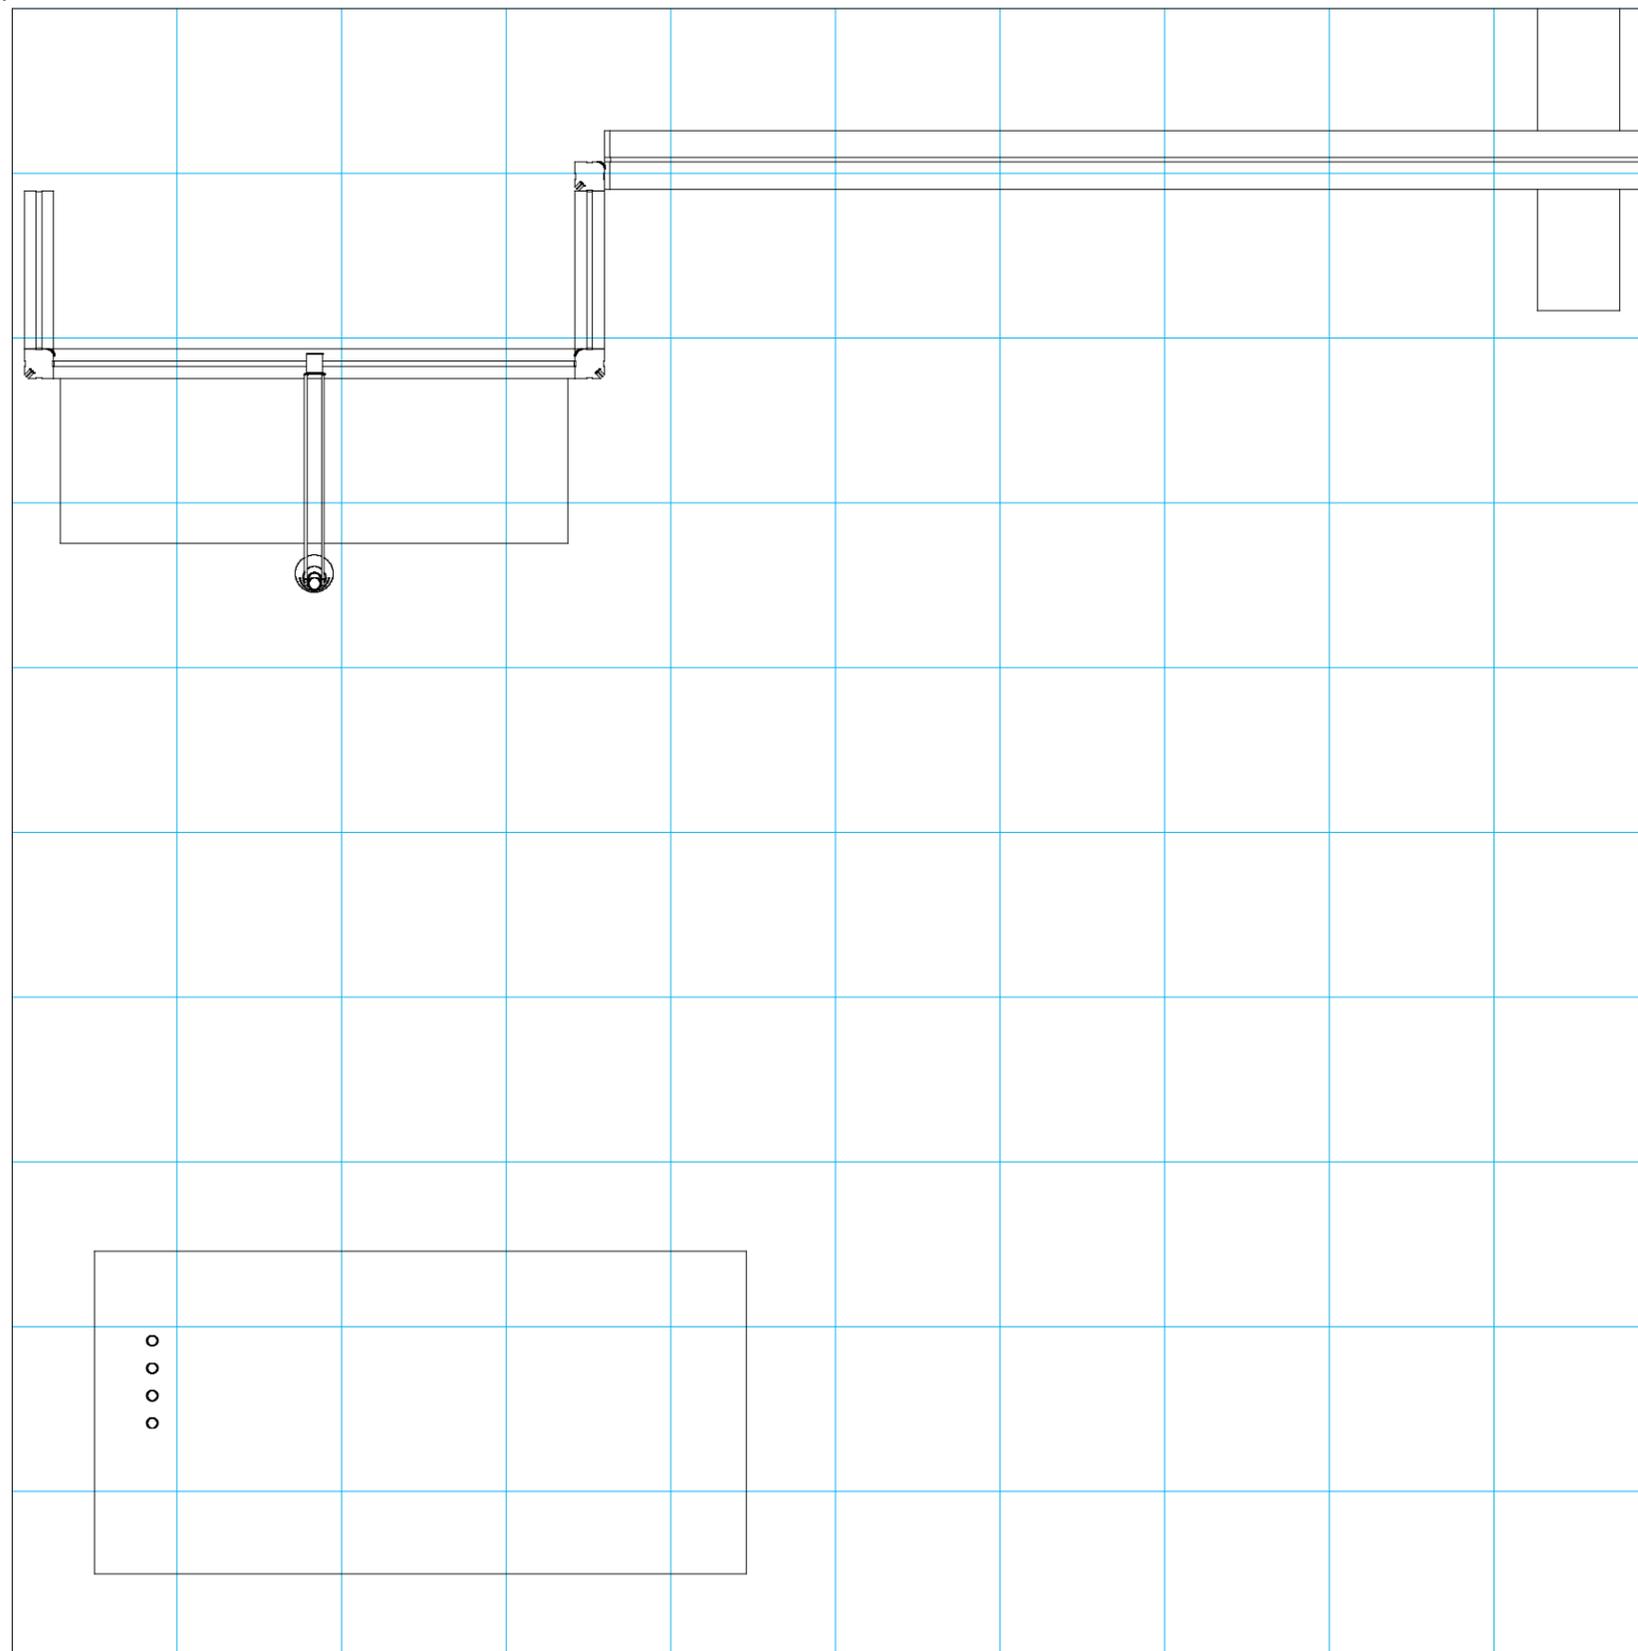

## General Setup Instructions

- Read entire setup instruction manual prior to unpacking parts and pieces.
- The setup instructions are created specifically for this configuration.
- Setup instructions are laid out sequentially in steps, including exploded views with detailed explanation for assembly.


## Cleaning & Packing

- For Cleaning Metal, Plex, & Laminate Parts: Use a **MILD NON-ABRASIVE** cleanser and soft cloth/paper towel to clean all surfaces.
- Keep exhibit components away from heat and prolonged sun exposure. **Heat and UV exposure will warp and fade components.**
- Retain all provided Packing Materials. All provided packing materials are for ease of repacking & component protection.


## Disassembly

- For loss prevention, tighten all set screws and locks during disassembly.

Assembly

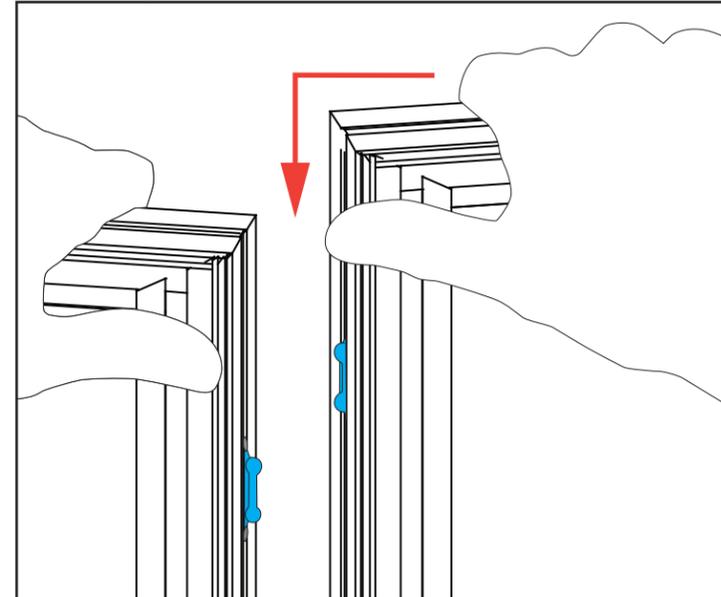

Assembly Cont'd

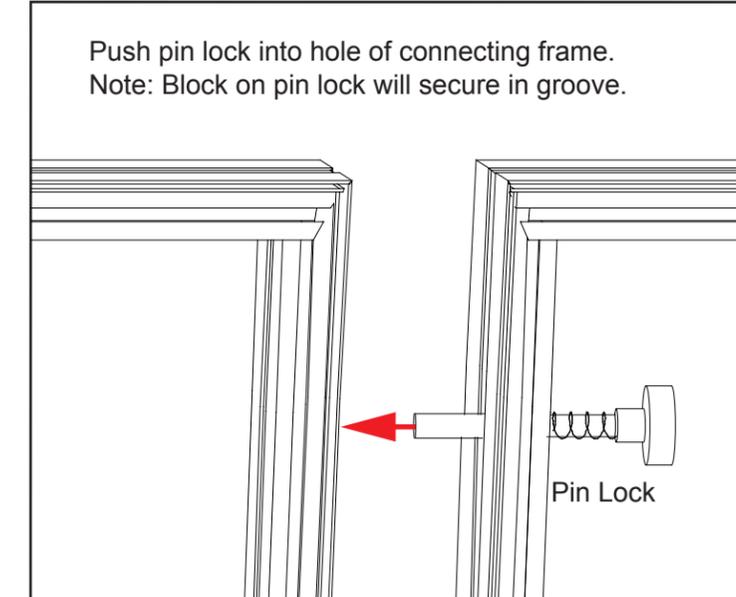


## Side-by-Side Assembly

- 1) Frames: Place frames side-by-side with one higher than the other, then slide panel down to lock panels securely together.
- 2) Corner Connectors: Repeat Step 1 for installing corner connectors to frames.


## Side-by-Side Disassembly

- 1) Pull pin lock outwards to disengage.
- 2) Pull frames upward and apart at the same time to detach.

## SEG Graphic Installation

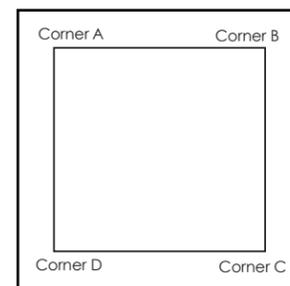

It is important to first insert graphic into each alternate corner, then to the sides of the frame. If this is not done, graphic will not fit into the frame correctly.

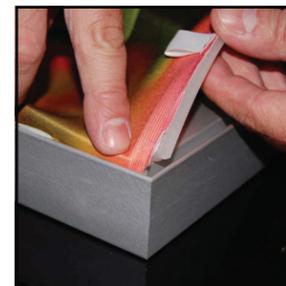

Step 1  
Insert corner A. Turn edge of graphic so silicon welt is perpendicular to face of graphic. Insert narrow side of welt with fabric to outside into the channel. Repeat for other side of this corner.




Step 2  
Repeat Step 1 for opposite corner C, then insert corner B, followed by corner D, to complete the installation of the corners.



Step 3  
Once all corners are inserted, press one silicon edge into channel from corners and work toward the center. Make sure welt is fully inserted into channel. Continue until all sides are done. Smooth out edges of graphic.

Graphic Removal

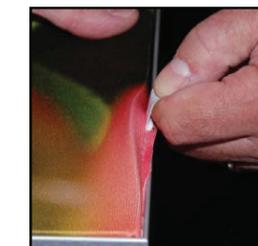

To remove the graphic from the frame, locate the fabric pull tab. Gently pull up on the tab to remove the fabric.


## Corner Bracket Assembly

- 1) Slide TWO-PIECE **TS RV 2** L-bracket into Interior Center Slot of extrusion so that two set screws are inside groove. Tighten two set screws to secure.
- 2) Slide one **A1** L-Bracket into outer interior grooves of upper and lower horizontals. Tighten set screws to secure.
- 3) Slide vertical extrusion over exposed ends of brackets in lower horizontal. Tighten set screws to secure.
- 4) Slide exposed ends of installed brackets of upper horizontal into open ends of verticals. Tighten set screws to secure.

## Disassembly

- 1) Loosen set screws on brackets and slide extrusions off of brackets.

### Corner Connection

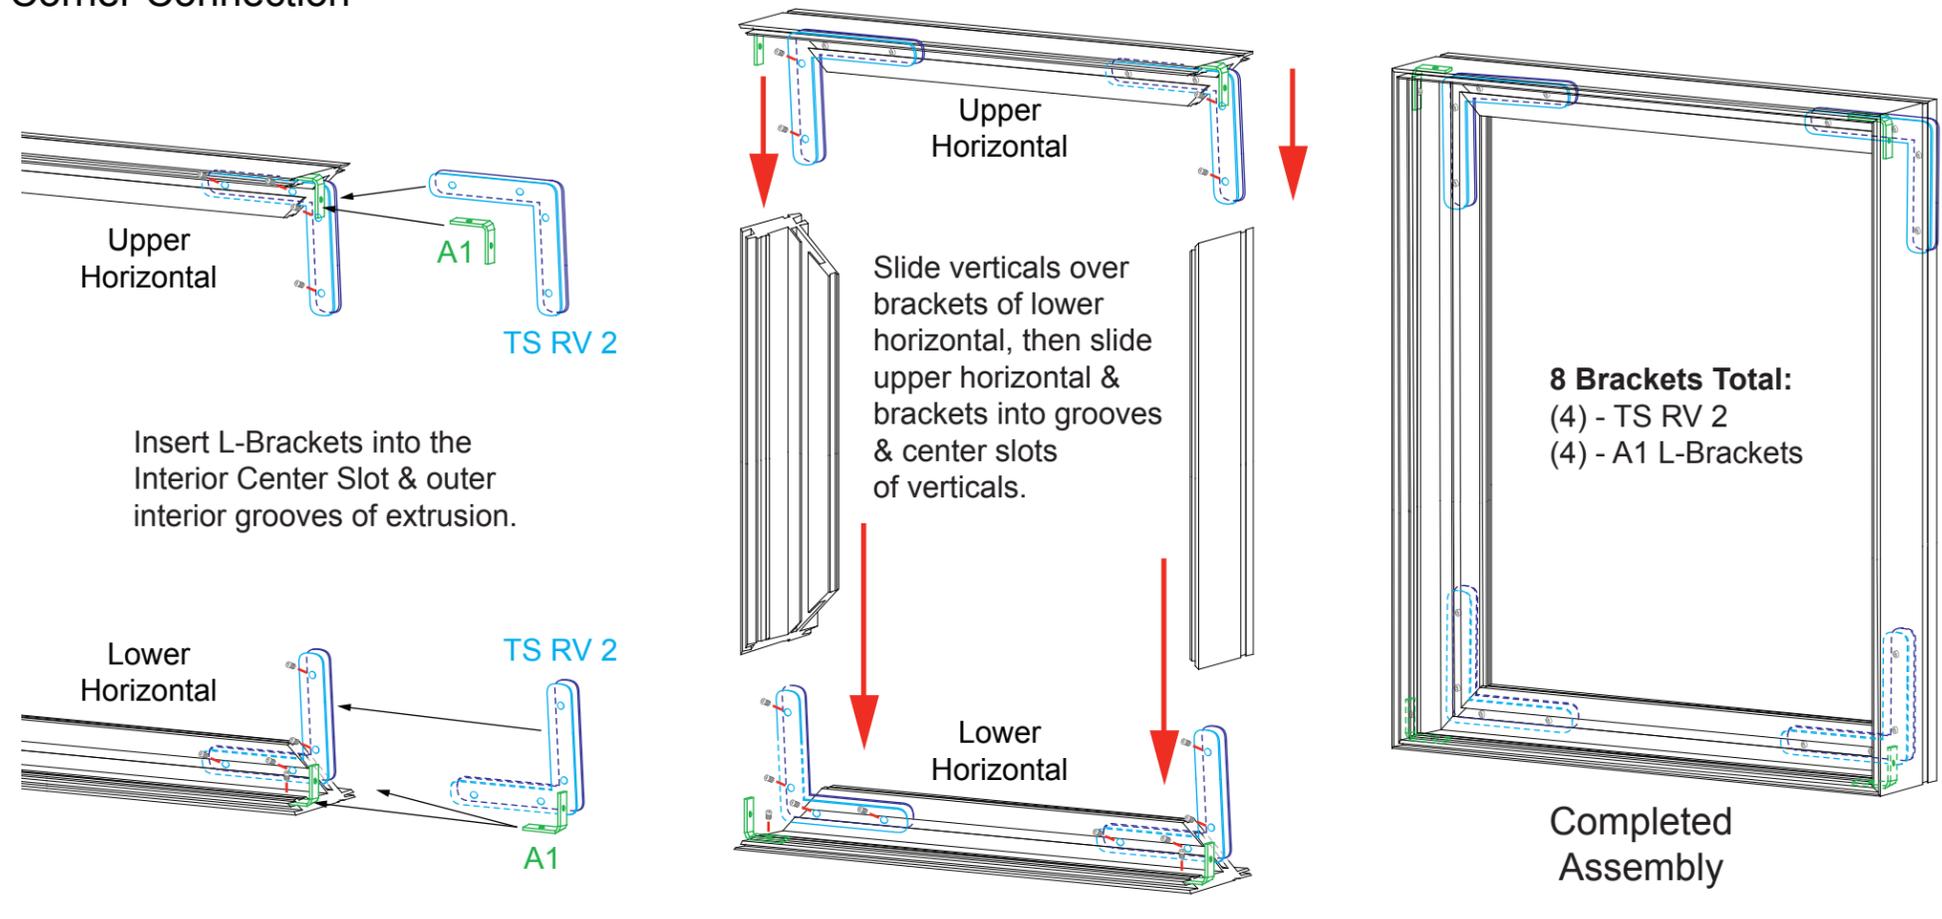


## Straight Bracket Assembly

- 1) Slide TWO-PIECE **TS RV 4** straight bracket into Interior Center Slot of extrusion, so that two of the set screws are inside groove. Tighten two set screws to secure.
- 2) Slide one **V4 Connector** into outer interior groove of extrusion, so that one set screw is inside groove. Tighten set screw.
- 3) Slide connecting extrusion over exposed ends of bracket & connector. Tighten all remaining set screws to secure extrusions.



### Straight Connection

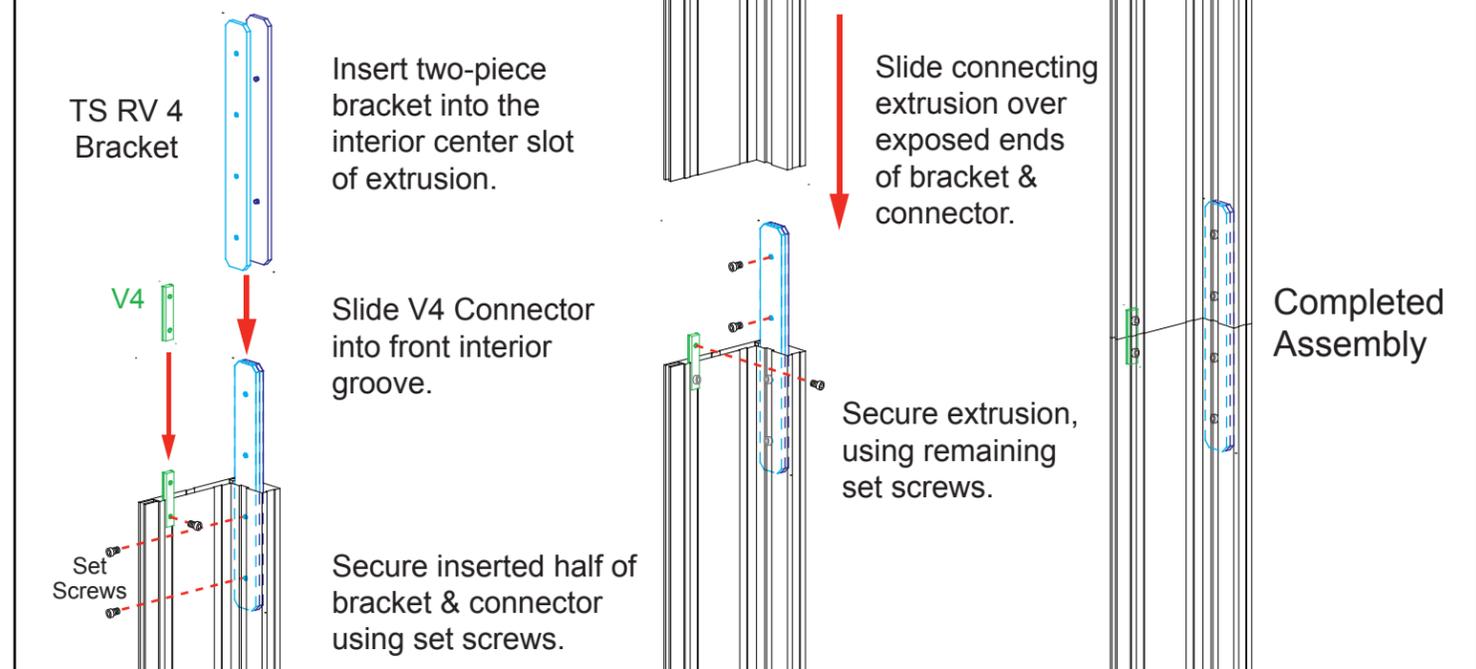






Item	Qty.	Description
1	1	76" CEI110 Horizontal Extrusion
2	1	76" CEI110 Horizontal Extrusion
3	1	95" CEI110 Vertical Extrusion
4	1	95" CEI110 Vertical Extrusion

Steps:

- 1) Assemble extrusions flat on floor.  
See CEI152 Frame Assembly sheet.
- 2) Connect light cords and attach transformers.  
See [Light to Light Connection](#) and [Light to Transformer Connection](#) details.

Keep A1 brackets attached to extrusions [1] and [2].

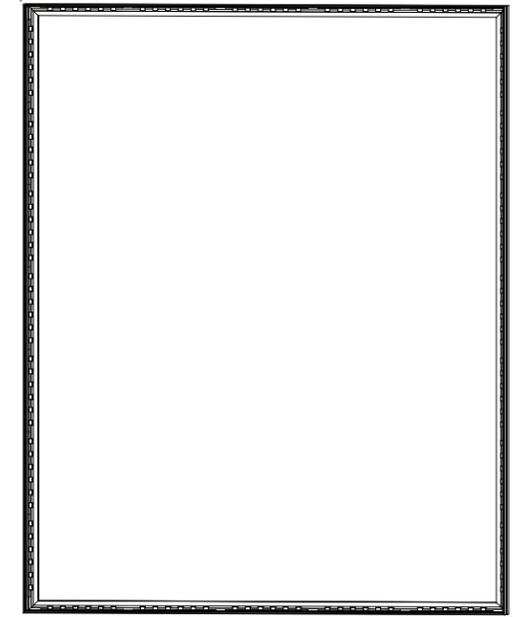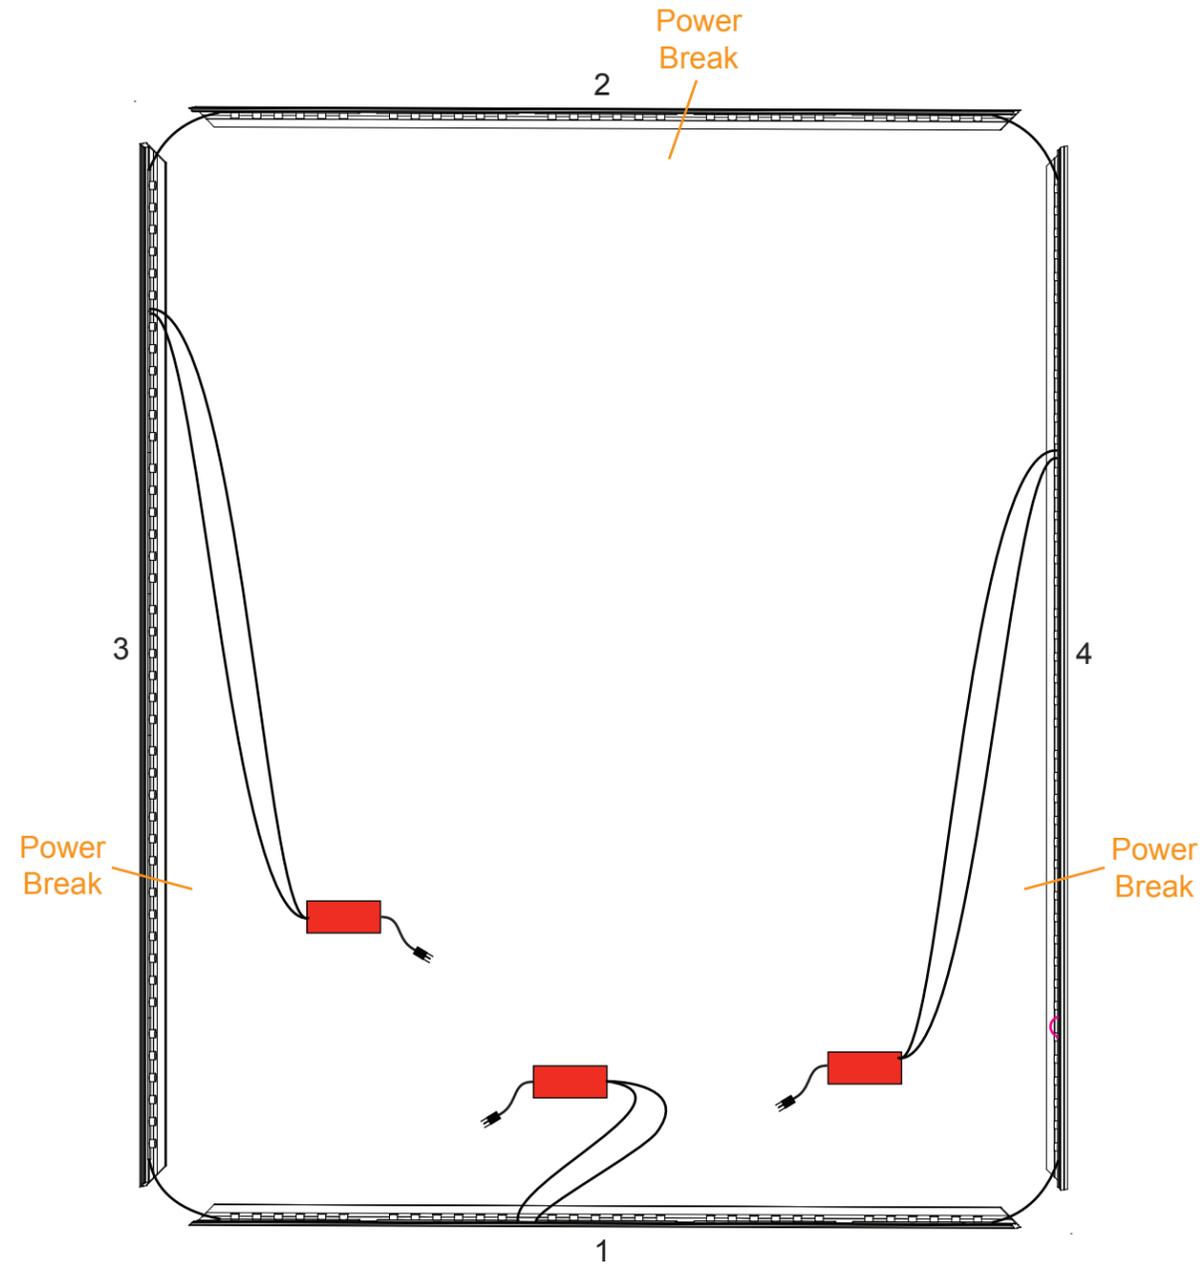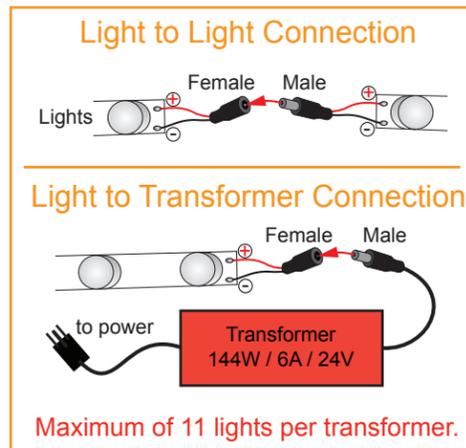








Completed Assembly

Item	Qty.	Description
5	1	Base Plate
1	1	11.5" w x 95" h Gravitee Panel
2	1	94.5" Gravitee Corner Connector w/ Caps
3	1	38" w x 95" h Gravitee Panel w/ (2) 91.904" S44
4	1	94.5" Gravitee Corner Connector w/ Caps
5	1	11.5" w x 95" h Gravitee Panel
6	1	95" Gravitee Corner Connector
--	3	Wood Shelf w/ (2) 11" Z41

Steps:

- 1) Connect lights to top of panel [3]. See [Light Connection](#) detail.
- 2) Attach base plate [5] to horizontal [1], using bolt, washer, and wing nut.
- 3) Assemble panels and connectors in numerical order, as shown. See Gravitee Assembly Instruction sheet for details.
- 4) Attach assembled lightbox to connector [6]. See [Lightbox Attachment](#) detail.
- 5) Install SEG graphic to assembled panels. See General Information sheet for [SEG Graphic Installation](#) instruction.
- 6) Attach shelves to panel [3]. See [Shelf Attachment](#) detail.





Keep S44 verticals attached to Gravitee panel [3].

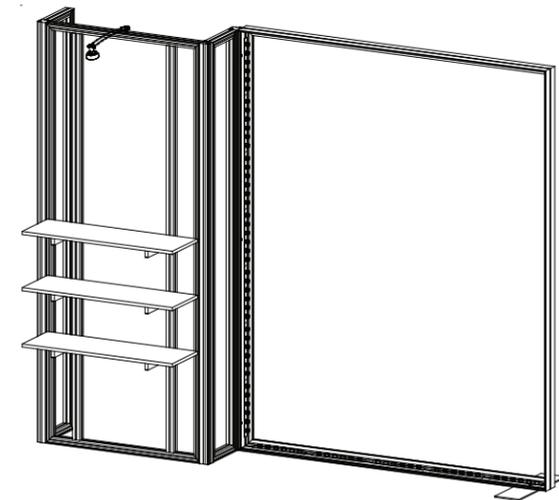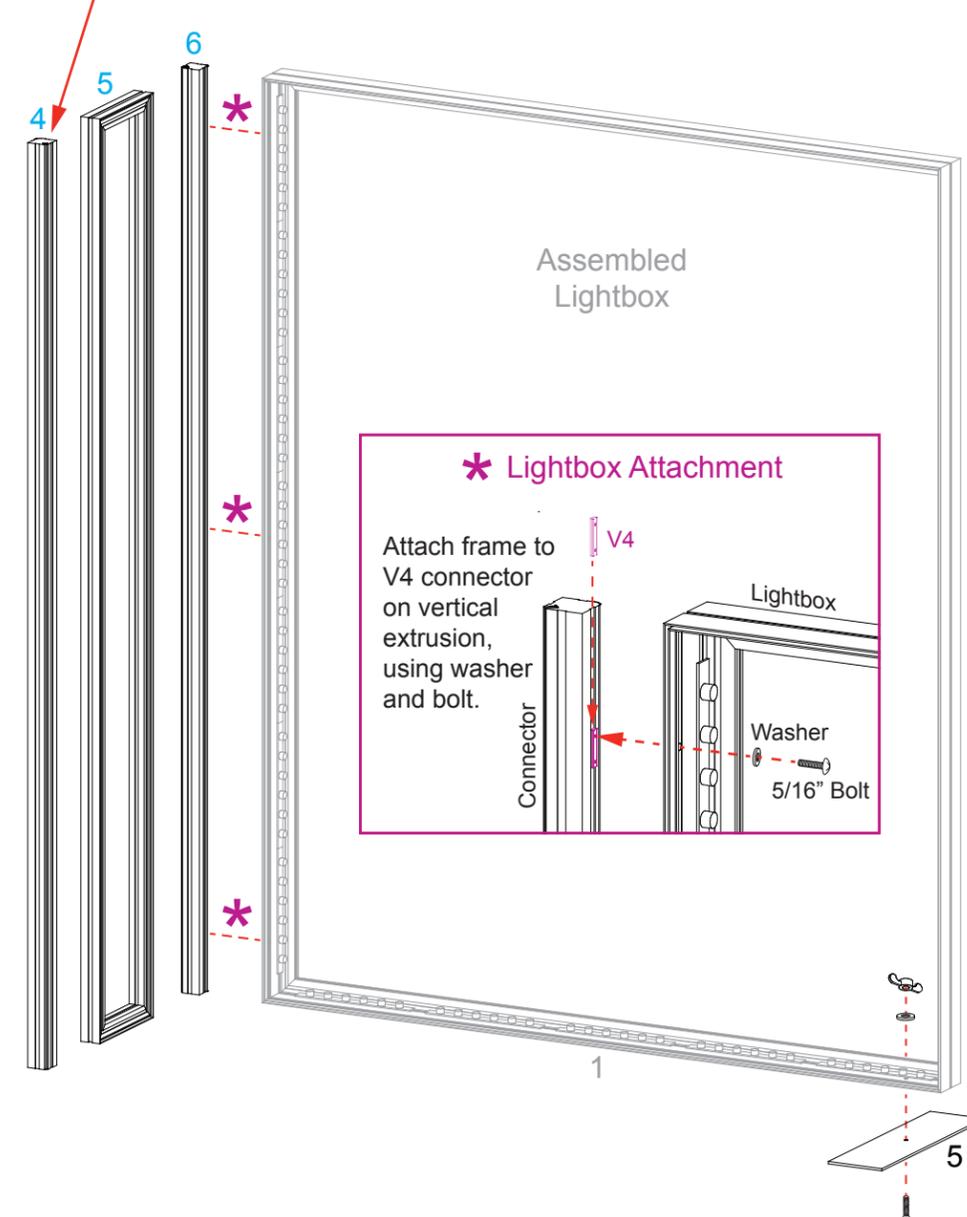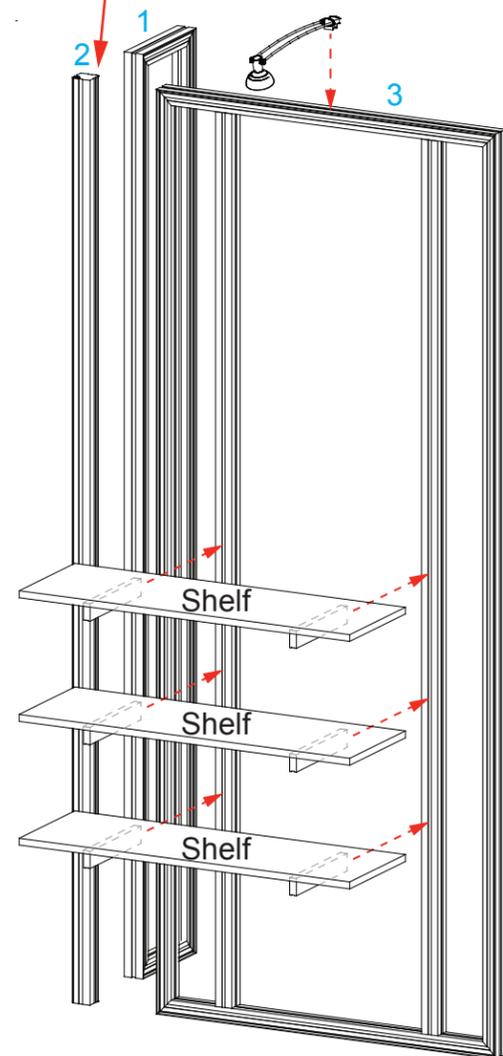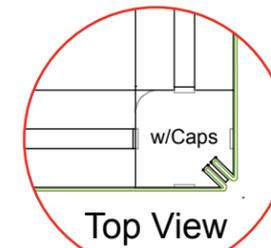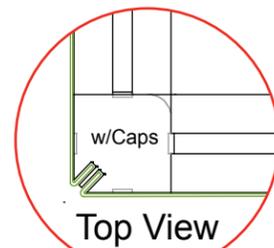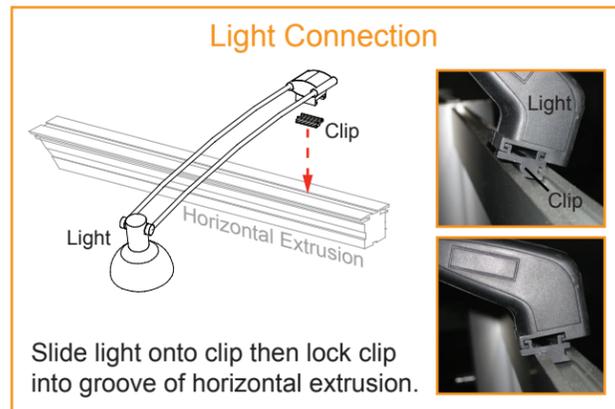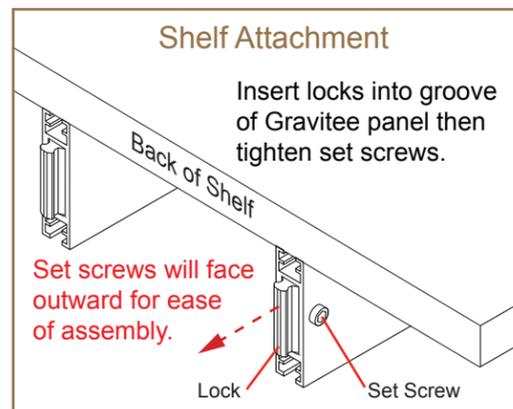


Completed Assembly

Steps:


- 1) Connect light blocker to Velcro on interior of assembled frame.
- 2) Attach assembled frame to verticals [3] and [3A].  
See [Frame Attachment](#) detail.
- 3) Install SEG graphic to front of assembled frame.  
See [SEG Graphic Installation](#) detail.
- 4) Place shelf inside assembled base on top of pins and supports.
- 5) Place cabinet top on assembled base, then secure with pins.  
See [Cabinet Top Attachment](#) detail.

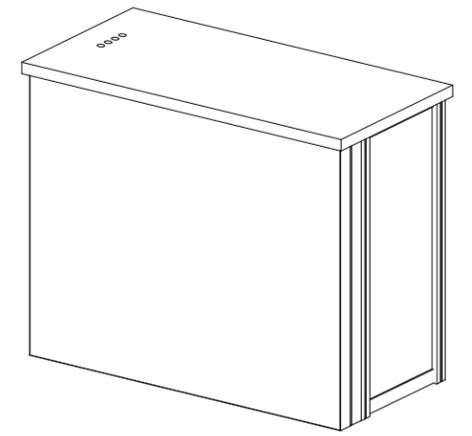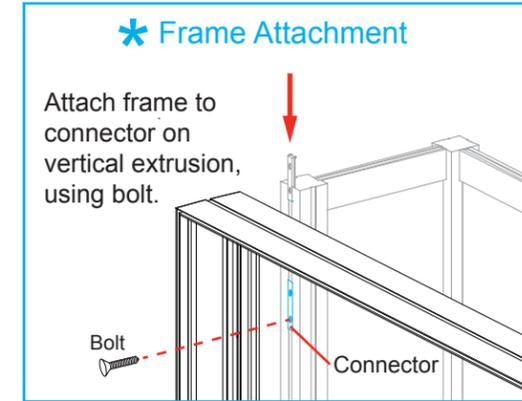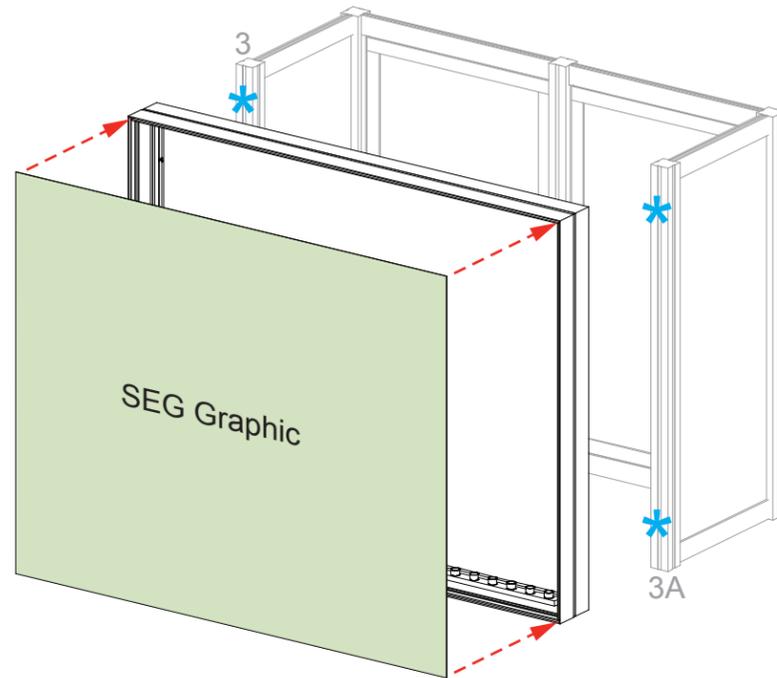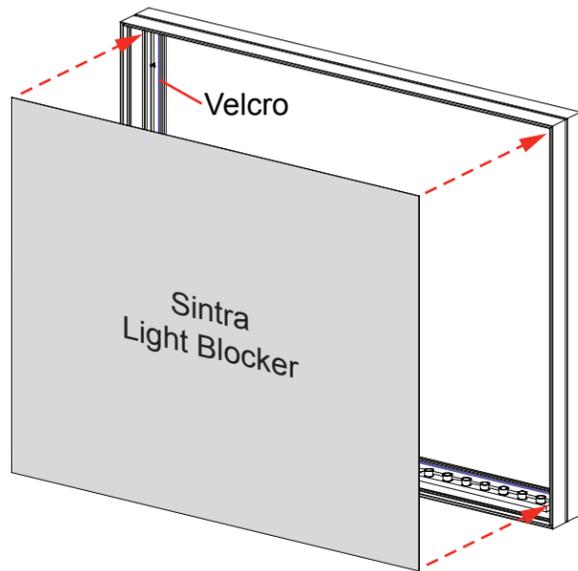


Completed Assembly

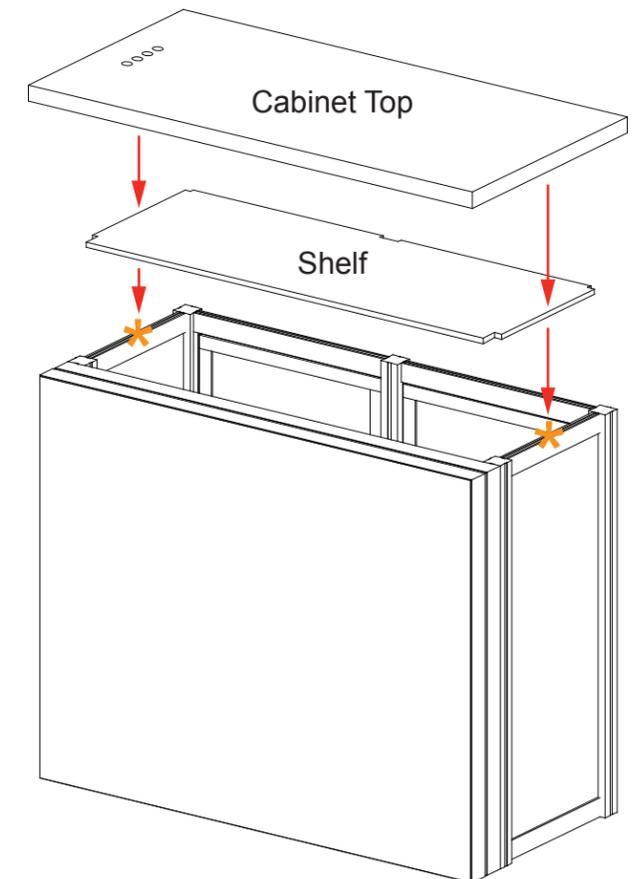

SEG Graphic Installation

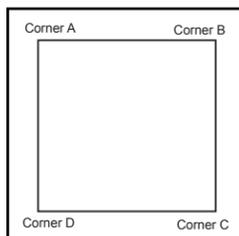

It is important to first insert graphic into each alternate corner then to the sides of the frame. If this is not done, graphic will not fit into the frame correctly.

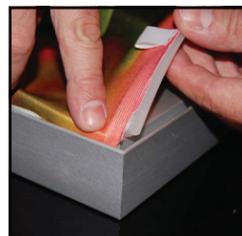


Step 1  
Insert corner A. Turn edge of graphic so silicon welt is perpendicular to face of graphic. Insert narrow side of welt with fabric to outside into the channel. Repeat for other side of this corner.




Step 2  
Repeat Step 1 for opposite corner C, then insert corner B, followed by corner D, to complete the installation of the corners.



Step 3  
Once all corners are inserted, press one silicon edge into channel from corners and work toward the center. Make sure welt is fully inserted into channel. Continue until all sides are done. Smooth out edges of graphic.

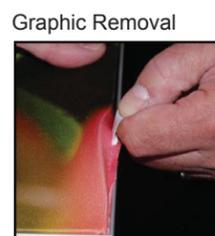

Graphic Removal  
To remove the graphic from the frame, locate the fabric pull tab. Gently pull up on the tab to remove the fabric.

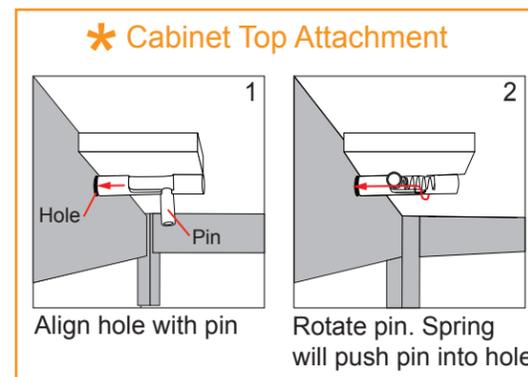

Item	Qty.	Description
1,1A	1,1	46.25" CEI-110 Horizontal Extrusion
2,2A	1,1	37.5" CEI-110 Vertical Extrusion
3,3A	1,1	37.5" S44 Vertical Extrusion
4	1	37.5" S44 Vertical Extrusion w/Door Hinges
5	1	37.5" S44 Vertical Extrusion w/Door Stops
6	1	37.5" S44 Vertical Extrusion w/Door Hinges
7,7A	2,2	14.153" Z45 Horizontal Extrusion
8,8A	2,2	20.408" Z45 Horizontal Extrusion

Steps:

- 1) Assemble frame extrusions [1] [1A] [2] and [2A]. See CEI152 Frame Assembly sheet.
- 2) Connect lights and transformer. See [Light to Light Connection](#) and [Light to Transformer Connection](#) details.
- 3) Attach horizontals [7] and [8] between verticals [3] [3A] [4] [5] and [6].
- 4) Slide Infills between verticals [3] [4] and [3A] [6].
- 5) Connect doors between verticals [4] [5] and [5] [6]. See [Door Connection](#) detail.
- 6) Attach horizontals [7A] and [8A] between verticals [3] [3A] [4] [5] [6] and on top of infills and doors.
- 7) Connect shelf supports to Velcro on inside of infills.

